BP Canada
SAINT-GOBAIN

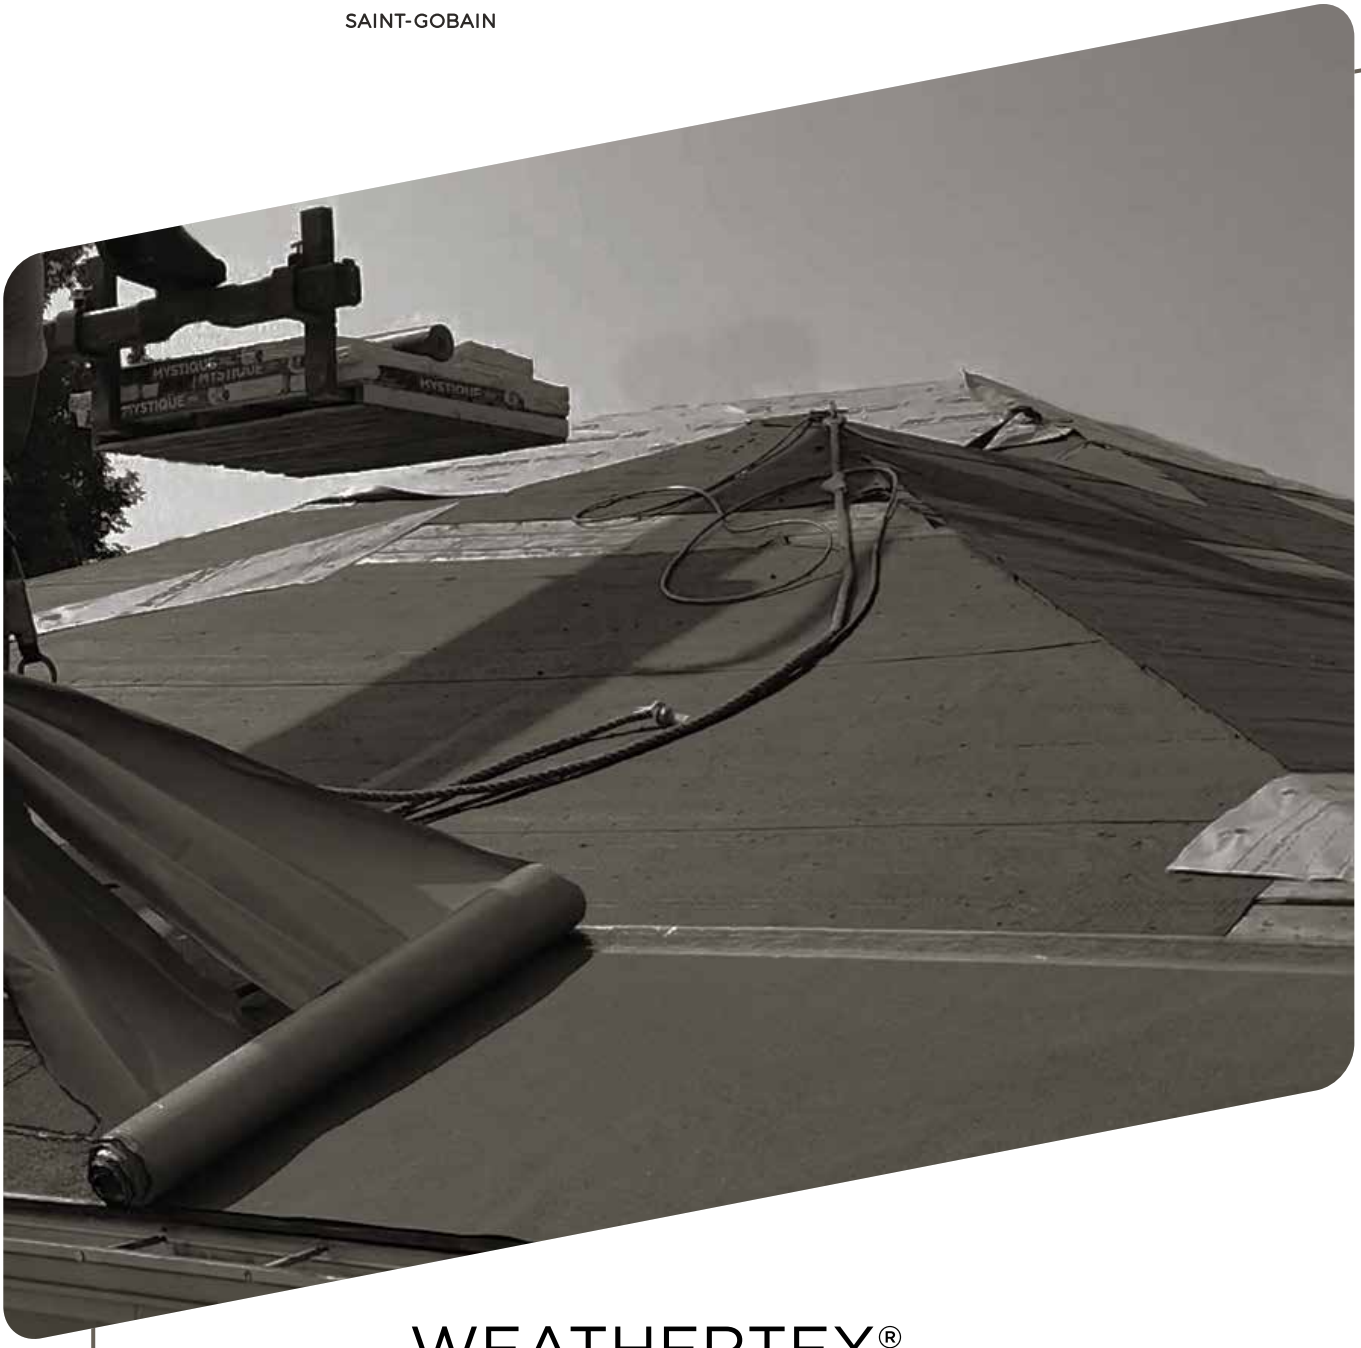

WEATHERTEX®

Installation Guide
Self-Adhesive Eave Protection Membrane

SAINT-GOBAIN

WEATHERTEX®

SELF-ADHESIVE EAVE PROTECTION MEMBRANE

USES

New construction or renovation with removal

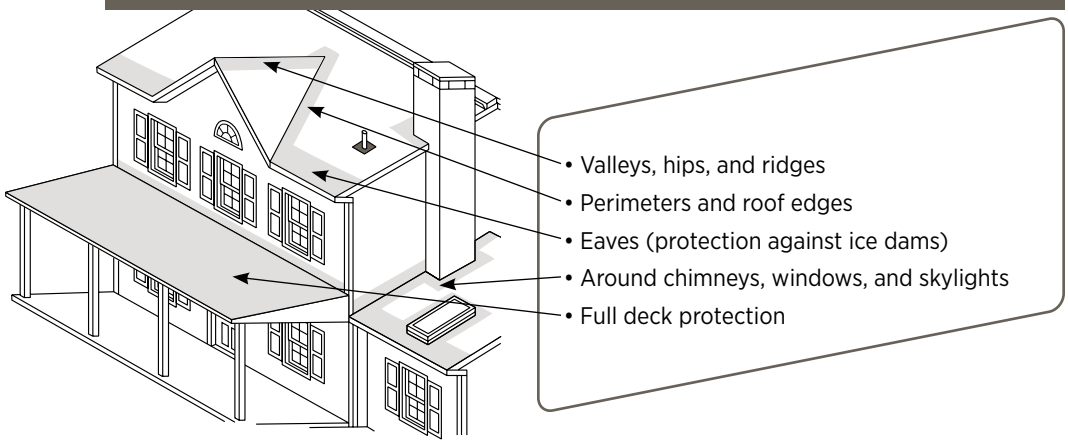

APPLICATION CONDITIONS

Sun exposure	Cover it as soon as possible
Temperature	Minimum: 5 °C (41 °F)
Surface	Dry and free of frost
Ventilation	Attic must be properly ventilated

SURFACE PREPARATION

Preparation required

NEW CONSTRUCTION	RE-ROOFING
Surface must be clean, dry, and free of frost	Remove shingles, felt, nails, and metal elements
Clean dirt, dust, and protrusions	

TOOLS REQUIRED

Membrane roll

Utility knife

Tape measure

WEATHERTEX®

SELF-ADHESIVE EAVE PROTECTION MEMBRANE

SAFETY GUIDELINES

		PERSONAL PROTECTIVE EQUIPMENT (PPE)		
Keep safety harness fastened and tethered	Do not walk on WEATHERTEX® when wet or frosted.	Hard hat	Gloves	Safety boots

INSTALLATION

Eaves

1. Unroll 2 m (6 ft) of WEATHERTEX® membrane.	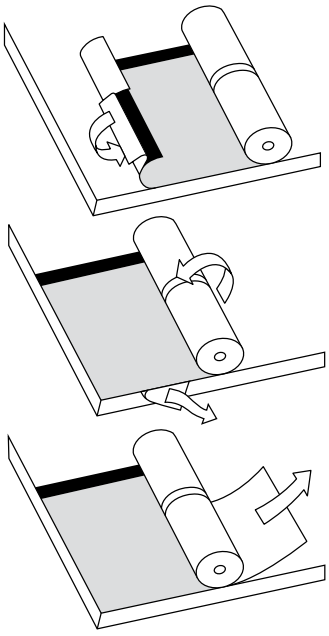
2. Align with roof edge and re-roll.	
3. Remove 30.5 cm (12 in) of release film. Fold it under the roll to create an anchor point. Press and nail in the center. Re-roll to the nailed section.	
4. Pull the release film to unroll. Press firmly to ensure proper adhesion. If the membrane shifts: cut and restart with a 15.2 cm (6 in) overlap.	
5. Start from the lower point and work upward. Install horizontally over the eaves and extend at least 30.5 cm (12 in) beyond the interior wall. For low-slope roofs (2–4 in./ft): extend at least 61 cm (24 in) beyond the interior wall.	
6. End lap overlap: 15.2 cm (6 in) minimum.	
7. Side lap overlap: 7.6 cm (3 in) on the smooth (non-sanded) band.	

Perimeters

1. Follow the same steps as for eaves (steps 1–4), aligning the membrane along the roof edge.
2. On slopes, start from the lower point and move upward.
3. One membrane width is sufficient for the perimeter.
4. End lap overlap: minimum 15.2 cm (6 in).

WEATHERTEX®

SELF-ADHESIVE EAVE PROTECTION MEMBRANE

Valleys, Hips, and Ridges

1. Cut membrane sections to required lengths.	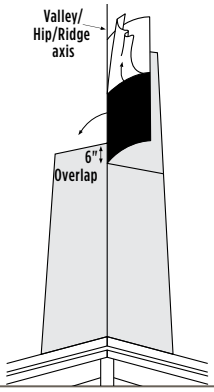
2. Fold the membrane lengthwise at the center. Align with the valley/hip/ridge axis.	
3. Remove 30.5 cm (12 in) of release film on one side, fold under the roll, press, and nail in the center. Re-roll to the nailed point.	
4. Pull the release film to unroll. Press firmly to ensure proper adhesion.	
5. Remove the remaining release film and press firmly to complete installation.	

IMPORTANT MEASURES

	End-to-end overlap: 15.2 cm (6 in)
	Horizontal overlap: 7.6 cm (3 in)
	Interior extension (min.) Roof pitches more than 4/12: 30.5 cm (12 in) Roof pitches 4/12 and less: 61 cm (24 in)
	Minimum installation temperature: 5 °C (41 °F)